

Setting up the Acer Chrome Tablet

About the Device

Introducing the Acer Chrome Tablet. You will find that the tablet works exactly like the Chromebook when in tablet mode. Take a look at the tablet and its features.







Setting up the Acer Chrome Tablet

Chrome Tablet Set Up

1. After powering up the tablet, a Network Connection Screen will open. Select the correct Wi-Fi network.
2. Sign into the WIFI network with the password. Click **Connect**.
3. Sign in with Dekalb County School District (DCSD) email with the student number with the s (s1234567). Click **Next**.
4. Enter the DCSD student password. Click **Next**.
5. Once logged in, the authentication box will appear. Enter student number with the s (s1234567) and password. Click **Sign in**.

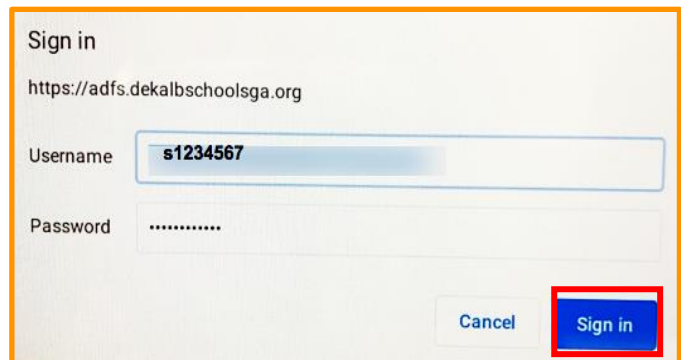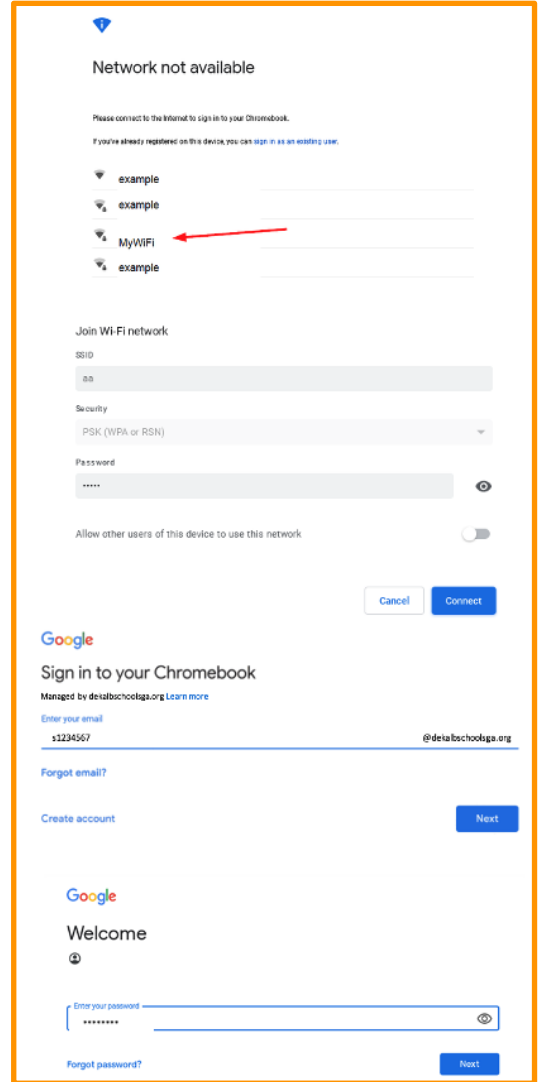

Setting up the Acer Chrome Tablet

6. After completing authentication, view the Navigation overview then proceed to the apps on the Chromebook and the tray at the bottom and on the screen.

